




WESTMINSTER
INTERNATIONAL LTD

Excellence through Service
Protecting your world

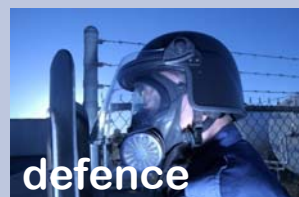

Threat Image Projection (TIP)

Threat Image Projection (TIP) is a system that randomly inserts artificial but realistic x-ray images during the routine baggage x-ray screening operation. When the scanner is in operation scanning a person's luggage and packages the TIP software will occasionally insert a suspicious item, i.e., explosives, a gun or a knife, into the scanned image of the item currently travelling through the machine. If the operator spots the presence of the suspicious item, the programme will tell them it is merely a TIP image; if they miss the item the programme will record this against their unique login, allowing supervisors to inform the operator and help train them and improve future proficiency.

The administrator can change the random frequency of the TIP image insertions, i.e., every 10, 20, 30, 60 items, etc, passing through the scanner. The TIP programme has a large library of suspicious images that are shown randomly. At the end of the day or shift the administrator can check the efficiency of the individual operators. TIP is an excellent training and quality tool for continuously assessing individual operator performance.

WI Code: 10915

Westminster International Ltd,
Westminster House,
Blacklocks Hill,
Banbury,
Oxfordshire OX17 2BS,
United Kingdom.
T: +44 (0)1295 756300
F: +44 (0)1295 756302
E: info@wi-ltd.com
W: www.wi-ltd.com

The Association of
Police and Public
Security Suppliers



The Defence
Manufacturers
Association



© 2009 Westminster
International Ltd.
All rights reserved.